

Fhope Packaging Machinery Co.,Ltd.

A professional supplier for Coil packing machine, wire packing machine, pipe packing machine, hose packing machine, pallet wrapping machine, door packing machine



PRODUCTS

Select your industry

---- Metals

---- Plastic

---- Textile

---- Paper

---- Window and door

---- Lumber and panel

---- Warehouse and palletizing

Select your products

----Coils

----Straight objects

----Pallet

Coil upender



Description:

Coil upender mainly apply to turn the objects in metallurgical industry. It also widely used in the module up-ending, coil turning, modules upending, roll upending... machine in above pictures is for steel coil, wire coil, aluminum coil...

The machine can be custom-build according client's requirement.

1. Drive system can be hydraulic
2. The conveyor can be connecting

Features:

1. Special double chain drive, oblique gear and worm speed reducer.
2. Four-roller device wrapped with polyamide adhesive.
3. Inverter controls, Fast ,stable and safe
4. Two displacement restrictors adopted to grantee a safety operation
5. The machine can be stop at any angle in turning.
6. Emergence stop and position locking function avoid rotation

Control:

1. Control panel or remote control
2. Invertors for adjusting the speed



Another Machines:



Steel coil wrapping machine

The solution is special designed for steel coil packaging. The package concept is an integral part of the packaging with pvc paper/film...



Parameters:

	FPCT-03	FPCT-05	FPCT-08	FPCT-10
Power Supply (V/Hz)	AC 380/50(or your requirement)			
Power consumption (KW)	1.3	2.0	2.5	3.5
Max. Loading	3T	5T	8T	10I
Speed (sec/set)	20-40	20-40	20-40	20-50

Machine Installation:

1. Place the machine in the corresponding neat melt pit; keep the working surface of the machine leveled with the ground
2. Connect the power supply according to the requirement of the nameplate, and make sure if it's connected with the earth wire reliably.
3. Adjust the levelness of the machine, to make it stand in a horizontal state.
4. Check and make sure whether all the switch positions are appropriate and firm.
5. Install the external guardrail of the machine and fix it effectively.

[Download Brochure](#)
 [Video](#)
 [Send Inquiry](#)
 [Contact us](#)

[TOP](#)